


Wichtiger Hinweis

Freischalten oder Sperren der Positionsdatenübertragung über Funk

Sie können entscheiden, ob Ihr Gerät an Ihre Partner Positionsdaten übermitteln soll und umgekehrt empfangsbereit sein soll für die Positionsdaten anderer Funkpartner. Ob Ihr Gerät dafür freigeschaltet ist oder nicht, erkennen Sie daran, ob im GPS Menü das untere Feld mit dem **GP LOCATOR** Fenster erscheint oder nicht.

- Zum Freischalten drücken Sie bei ausgeschaltetem Gerät beide Tasten **PAGE** und **PTT**(Sendetaste), halten Sie diese bitte gedrückt, während Sie mit der anderen Hand das **Gerät einschalten**. Dann lassen Sie alle Tasten los.
- Das Abschalten der GP LOCATOR Funktion erfolgt genauso.

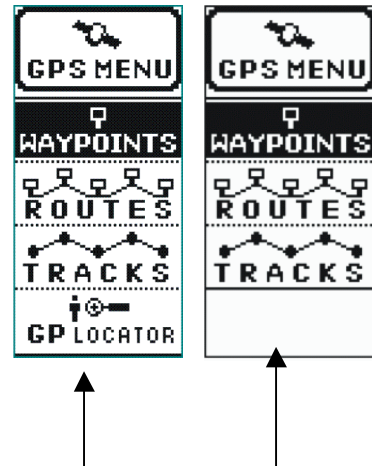

Important Note

Activation of the GP LOCATOR position transmission and receiving mode

You can select whether or not Your radio shall be able to transmit and receive positioning data to or from other radio partners.

You can recognize the activated **GP LOCATOR** mode in the **GPS MENU** display. If the display shows the left picture, the GP LOCATOR is activated. You can use following procedure to activate the mode:.

- Switch off the unit. Press and keep pressed **PAGE** und **PTT** simultaneously, while You **switch on** the radio again with the other hand. Release all buttons. The GP Locator is now activated
- To disable **GP LOCATOR** mode follow the same procedure again.

